

如何使用

1. 打开 config.json 文件
2. 配置端口，如 "COM123" (其他参数暂不修改)
3. 双击运行 wt_efuse.exe
4. 等待烧录完成即可

```
C:\Users\cn\Downloads\esptool-v5.0.0-windows-amd64\esptool-windows-amd64\dist\wt_efuse.exe
Frozen: C:\Users\cn\Downloads\esptool-v5.0.0-windows-amd64\esptool-windows-amd64\dist
====>path: C:\Users\cn\Downloads\esptool-v5.0.0-windows-amd64\esptool-windows-amd64\dist
Connecting...
Detecting chip type... ESP32-C3
[03] BLOCK_USR_DATA      size=32 bytes, offset=00 -> [48 57 33 30 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00]
0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Batch mode is enabled, the burn will be done at the end of the command.

Check all blocks for burn...
idx, BLOCK_NAME,      Conclusion
[03] BLOCK_USR_DATA    is already written the same value, continue with EMPTY_BLOCK
Nothing to burn, see messages above.
Data type: <class 'str'>
Read data: 48 57 33 30 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

烧录成功, 即将关闭...
```

5.